




## Manual Quick Reference Guide: Sensitivity Test

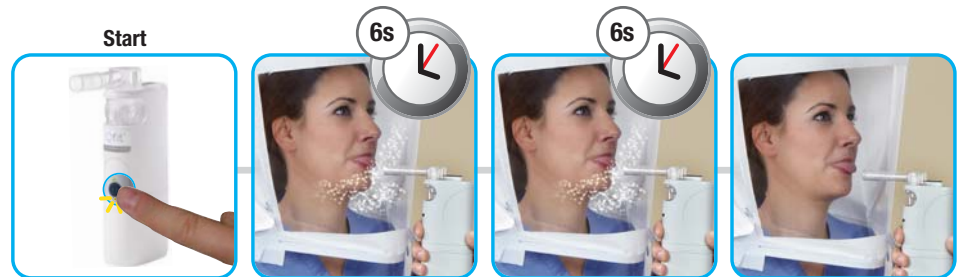

Start  
Push and hold test button for more than 1 second.

6s  
Qfit will now dispense solution for 6 seconds.

6s  
Push and hold test button again for more than 1 second. Qfit will now dispense solution for 6 seconds.

Ask subject if taste is detected.

**Yes**

If **Yes**, sensitivity test is over. Move on to the fit test.

**No**

If **No** taste is detected, return to step 1.



Repeat a total of three times. If no taste is detected after three attempts, the subject cannot detect the solution. Use another type of solution or another type of fit test.

**TSI Incorporated** - 500 Cardigan Road, Shoreview, MN 55126-3996 USA

<b>USA</b>	Tel: +1 800 874 2811	<b>E-mail:</b> info@tsi.com	<b>Website:</b> www.tsi.com
<b>UK</b>	Tel: +44 149 4 459200	<b>E-mail:</b> tsiuk@tsi.com	<b>Website:</b> www.tsiinc.co.uk
<b>France</b>	Tel: +33 491 11 87 64	<b>E-mail:</b> tsifrance@tsi.com	<b>Website:</b> www.tsiinc.fr
<b>Germany</b>	Tel: +49 241 523030	<b>E-mail:</b> tsigmbh@tsi.com	<b>Website:</b> www.tsiinc.de
<b>India</b>	Tel: +91 80 41132470	<b>E-mail:</b> tsi-india@tsi.com	
<b>China</b>	Tel: +86 10 8260 1595	<b>E-mail:</b> tsibeijing@tsi.com	
<b>Singapore</b>	Tel: +65 6595 6388	<b>E-mail:</b> tsi-singapore@tsi.com	



Contact your local TSI Distributor or visit our website [www.tsi.com](http://www.tsi.com) for more detailed specifications.



## Manual Quick Reference Guide: Fit Test



### Start



Push and hold the test button for more than 1 second to activate Qfit for each 6-second dispersion.



Hold the pump to the hood opening for the 7-minute fit test and activate Qfit based on the timing protocol from Table A.



Insert the Qfit nebulizer nozzle into the hood opening for the 7-minute fit test.

### Perform Fit Test Exercises:



1 Breathe normally, stand normal, do not talk.



2 Breathe deeply, stand normal, do not talk.



3 Turn head side to side, do not talk.



4 Move head up and down, inhale at ceiling, do not talk.



5 Talk out loud.



6 Bend over or jog in place.



7 Breathe normally, stand normal, do not talk.



## Manual Quick Reference Guide: Fit Test

TABLE A

Fit Test Timing Protocols of Qfit Respirator Fit Tester	Timing Protocol 1	Timing Protocol 2	Timing Protocol 3
Number of 6-second activations during initial Fit Test dispersions (with respirator)	2	4	6
Number of 6-second activations of fit test solution for each 30 seconds thereafter (with respirator)	1	2	3

Qfit is a trademark of TSI Incorporated.  
U.S. and International patents pending.